

## **Notice**

Hewlett-Packard makes no warranty of any kind with regard to this material, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose. Hewlett-Packard shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this material.

Hewlett-Packard assumes no responsibility for the use or reliability of its software on equipment that is not furnished by Hewlett-Packard.

This document contains proprietary information which is protected by copyright. All rights are reserved. No part of this document may be photographed, reproduced, or translated to another language without prior written consent of Hewlett-Packard Company.

The information contained in this document is subject to change without notice.

## Preface

This edition of the **HP 3000/9x9KS Installation Guide** contains technical information about HP 3000 computer systems. The HP 3000/9x9KS family includes the following models:

### **HP 3000/9x9KS**

Model 939KS

Model 959KS

Model 969KS

Model 979KS

# Table of Contents

---

Introduction .....	1
Overview of System Installation .....	1
Overall View of System Power/Data Cabling .....	2
Console, Keyboard, and UPS .....	3
Local Area Network (LAN) .....	4
SCSI Cabling (Single-ended & Fast/Wide Differential) .....	5
Internal or External Modem.....	6
Summary of System Connections .....	7
Stabilizer Block (Chock Block) .....	8
Power Connections .....	9
Models 939KS/959KS/969KS .....	9
Model 979 KS .....	10
Power-on: .....	11



# Introduction

This Installation Guide illustrates the procedures for installing the HP 3000 Series 939KS/959KS/969KS and 979KS computer. The contents of this guide include:


1. Overview of System Installation - a brief description of the installation procedure.
2. Overview of System Power/Data Cabling - A reference figure showing the basic power and data connections for the core system (System Processing Unit and Console).
3. Installation Steps - A series of figures showing each step in the installation process. Brief explanations below each figure provide additional information.

## ***Overview of System Installation***

- 1. Console, Keyboard, and UPS (Uninterruptible Power System):**
  - A. Connect the console data cable to the "Console" port on the system core I/O card.
  - B. Plug the console power cable into a UPS power receptacle.
  - C. Connect the keyboard cable to the keyboard connector on the console.
  - D. Connect the UPS data cable between the "UPS" connector on the system and the appropriate data connector on the UPS.
- 2. Local Area Network (LAN):**
  - A. Connect the LAN to either the "THINLAN" or "AUI" connector on the system core I/O card.
- 3. SCSI Cabling (Single-ended & Fast/Wide Differential):**
  - A. Connect a high-density Single-ended (SE) SCSI cable or terminator to the "SE SCSI" connector on the system core I/O card.
  - B. Connect a Fast/Wide Differential SCSI cable or terminator to the "F/W DIFF SCSI" connector on the system core I/O card.
- 4. Internal or External Modem:**
  - A. Connect a line access module to the "INTERNAL MODEM" connector on the core I/O card. If using the internal modem, do not connect an external modem. Proceed to the "Power Connections" step.
  - B. If not using the internal modem, connect an external modem to the "EXTERNAL MODEM" connector on the system core I/O card.
- 5. Summary of System Connections:**
  - A. Before powering on the system, confirm that all system data and power cables are correctly connected.
  - B. Check that all connectors and plugs are firmly seated.
- 6. Stabilizer Block (Chock Block):**
  - A. Roll the system cabinet onto the stabilizer block in the desired location to prevent the system cabinet from being inadvertently moved around.
- 7. Power Connections:**
  - A. Plug the system power cable into the appropriate power receptacle at the rear of the Uninterruptible Power System (UPS).
  - B. Plug the UPS power cable into wall power.
- 8. Power On:**
  - A. Turn on the Uninterruptible Power System (UPS).
  - B. Turn on all peripherals
  - C. Turn on the system by setting the key switch to the "ON" position.
  - D. Refer to the Operator's Handbook that came with your system for operator information.

# Overall View of System Power/Data Cabling


The figure below shows an overview of the power and data cabling for the system (SPU), console, and the optional UPS, and is intended for reference only. To proceed with actual installation of the system, start at the page titled "Standard Console, Keyboard, and Optional UPS".

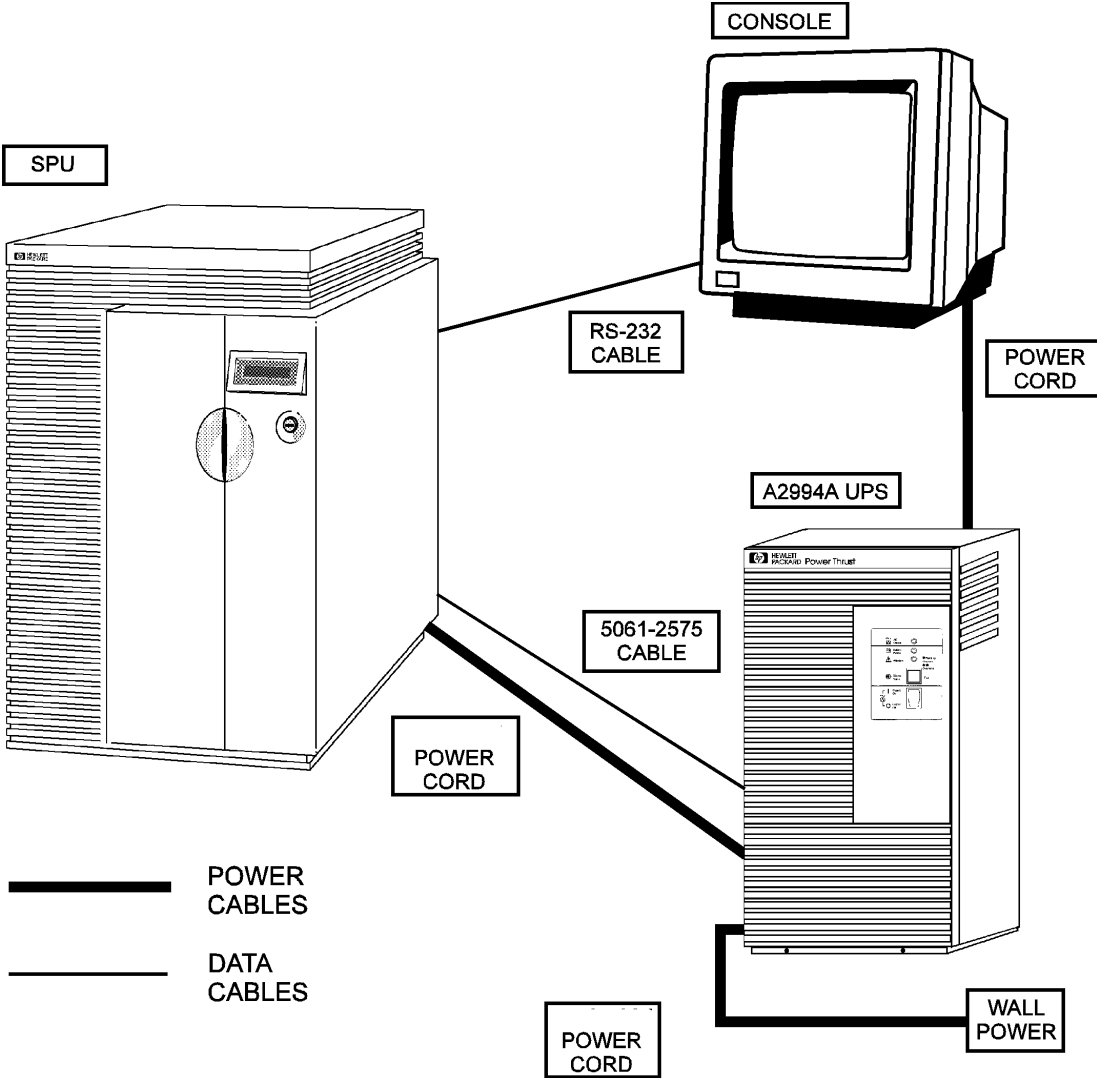

kh3iC10

# Console, Keyboard, and UPS

(NOTE: The A2994A UPS shown in the example is supported only on models 939KS/959KS/969KSx00 and 969KSx20. The rear panels on the 18kV<sub>A</sub> and 3.0kV<sub>A</sub> UPS for model 979KS have a different appearance but use a similar data connection.)

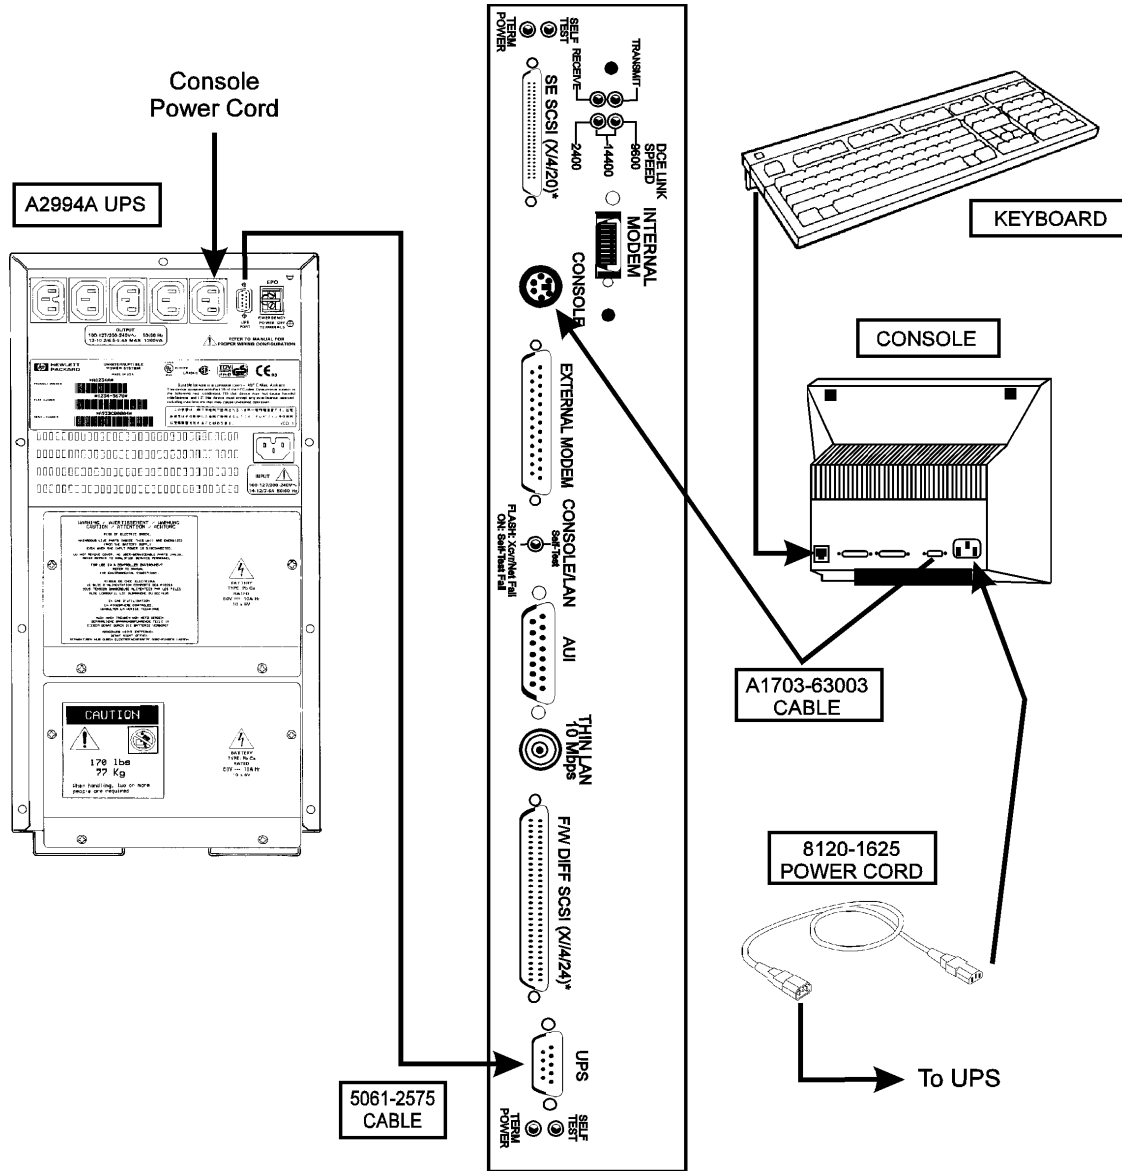


kh3iC02

- Connect the console data cable to the "Console" port on the system core I/O card.
- Plug the console power cable into a UPS power receptacle.
- Connect the keyboard cable to the keyboard connector on the console.
- Connect the UPS data cable between the "UPS" connector on the system and the appropriate data connector on the UPS.

**NOTE: Do not plug the UPS into a power receptacle at this time.**

# Local Area Network (LAN)

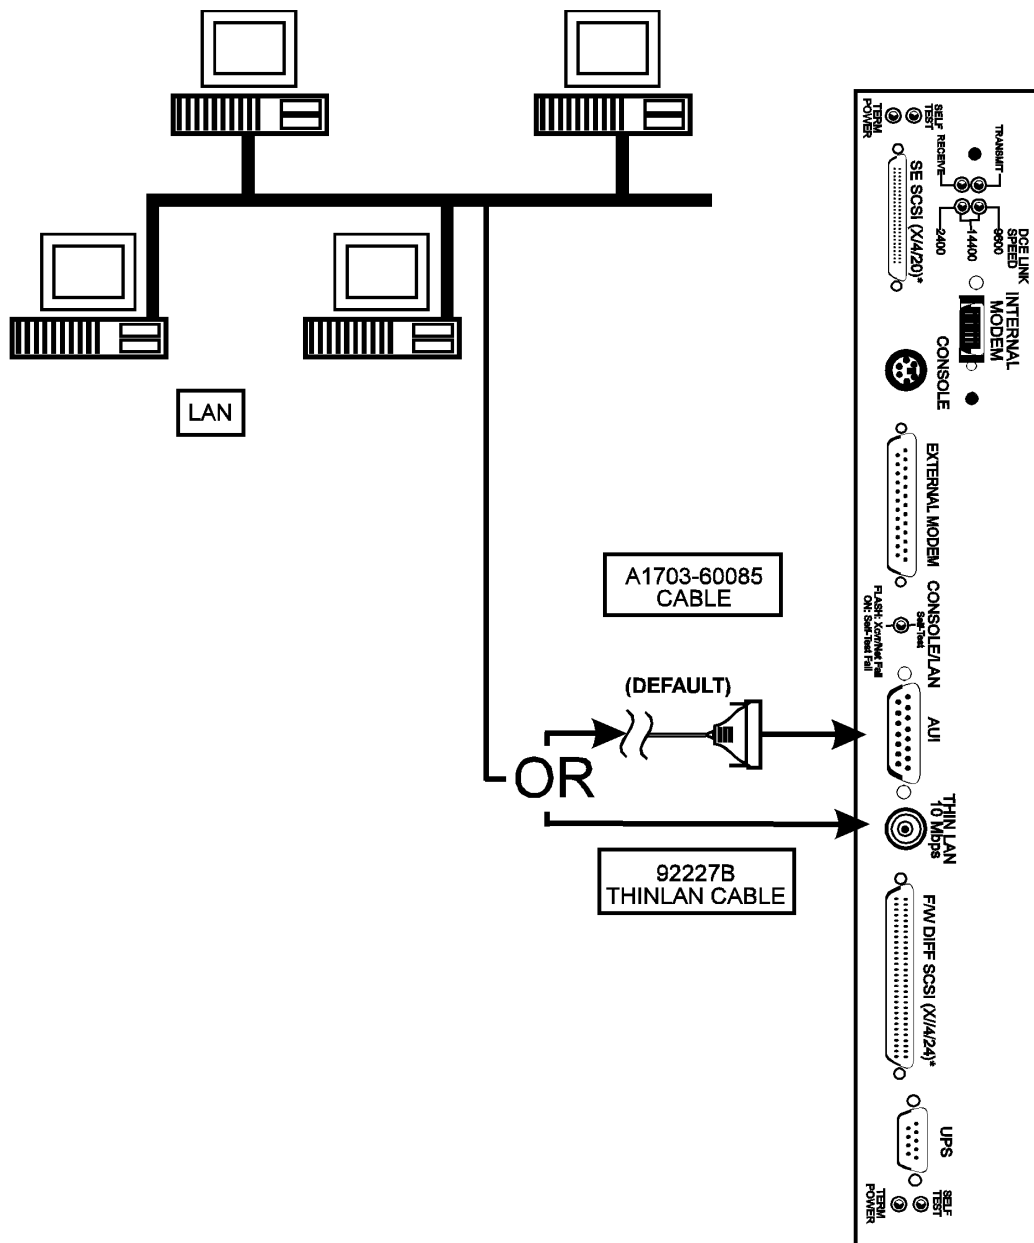

kh3iC03b


Connect the LAN to either the "THINLAN" or "AUI" connector on the system core I/O card.

## CAUTION

The ThinLAN and AUI LAN can not be connected at the same time. Only one LAN connector can be active at a time. The AUI connector is selected as the default connector. If you need to have the ThinLAN connector active, contact your local Hewlett Packard Service or Sales representative.




# SCSI Cabling (Single-ended & Fast/Wide Differential)

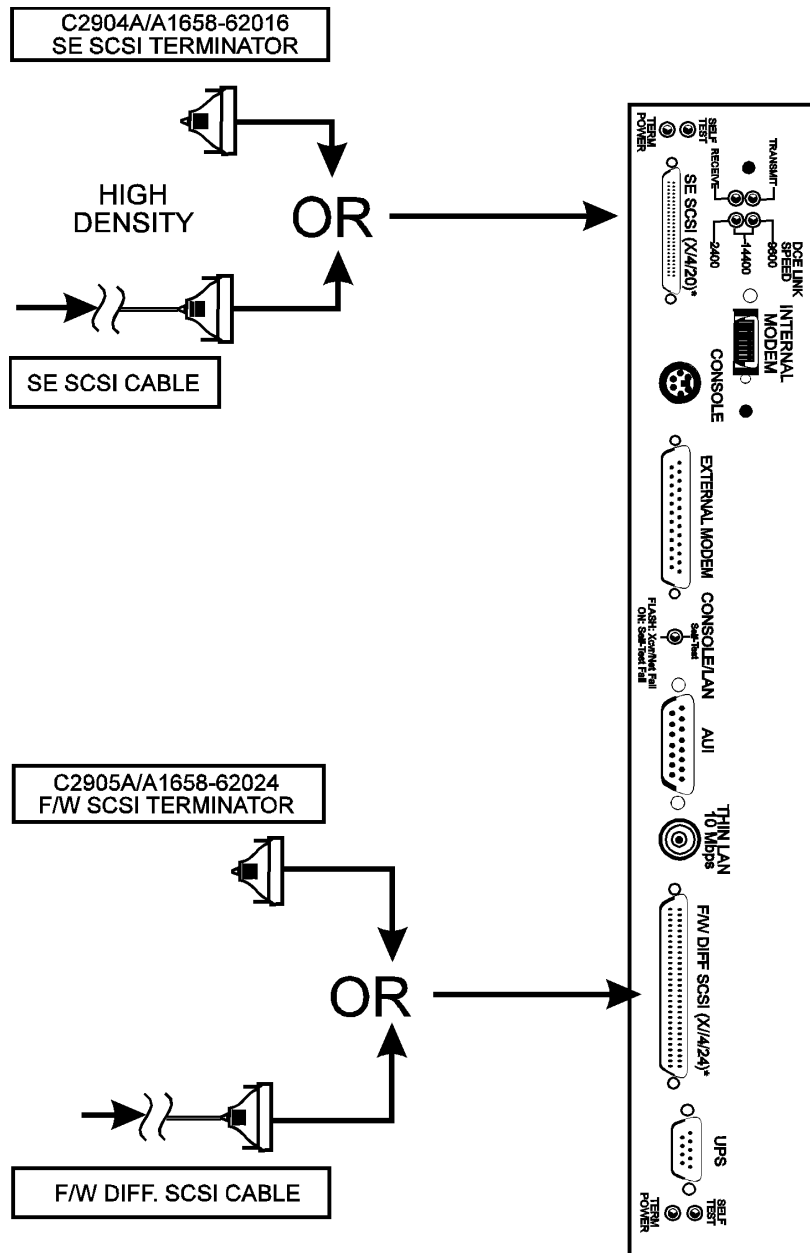

kh3iC05a

- A. Connect a high-density Single-Ended (SE) SCSI cable or terminator to the “SE SCSI” connector on the system core I/O card.
- B. Connect a Fast/Wide Differential SCSI cable or terminator to the “F/W DIFF SCSI” connector on the system core I/O card.


# Internal or External Modem

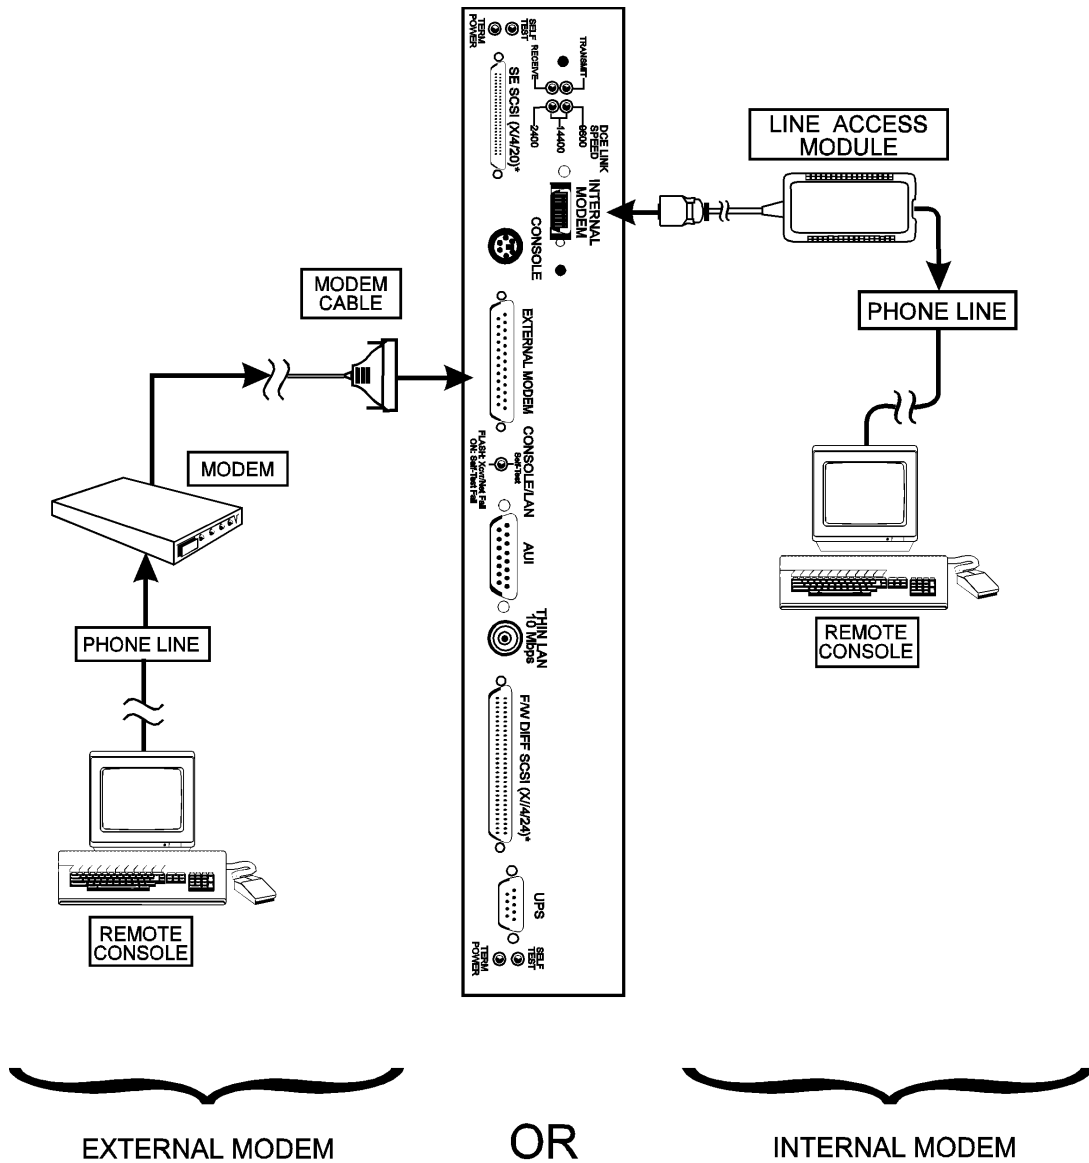

kh3iC04a

- A. Connect a LAM (Line Access Module — an adaptor for connecting the modem to the local country phone system) to the "INTERNAL MODEM" connector on the system core I/O card. If using an internal modem, do not connect an external modem. Proceed to the "Power Connections" step.
- B. If not using the internal modem, connect an external modem to the "EXTERNAL MODEM" connector on the system core I/O card.


# Summary of System Connections

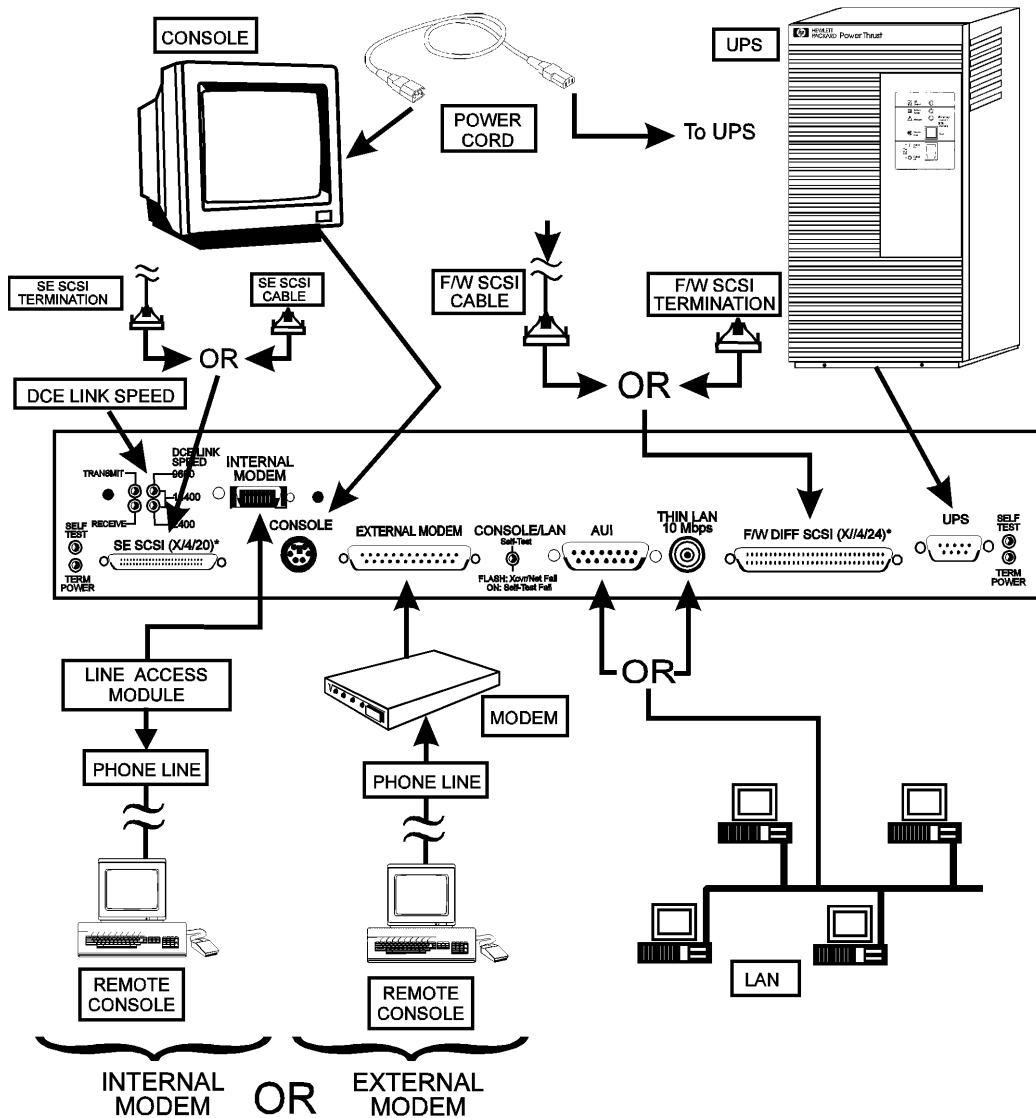

kh3iC07a

The figure above is a summary of all the system connections previously described. You should use this figure to make a quick check of all connections you have made to ensure that they are correct before connecting power cabling.

## Stabilizer Block (Chock Block)

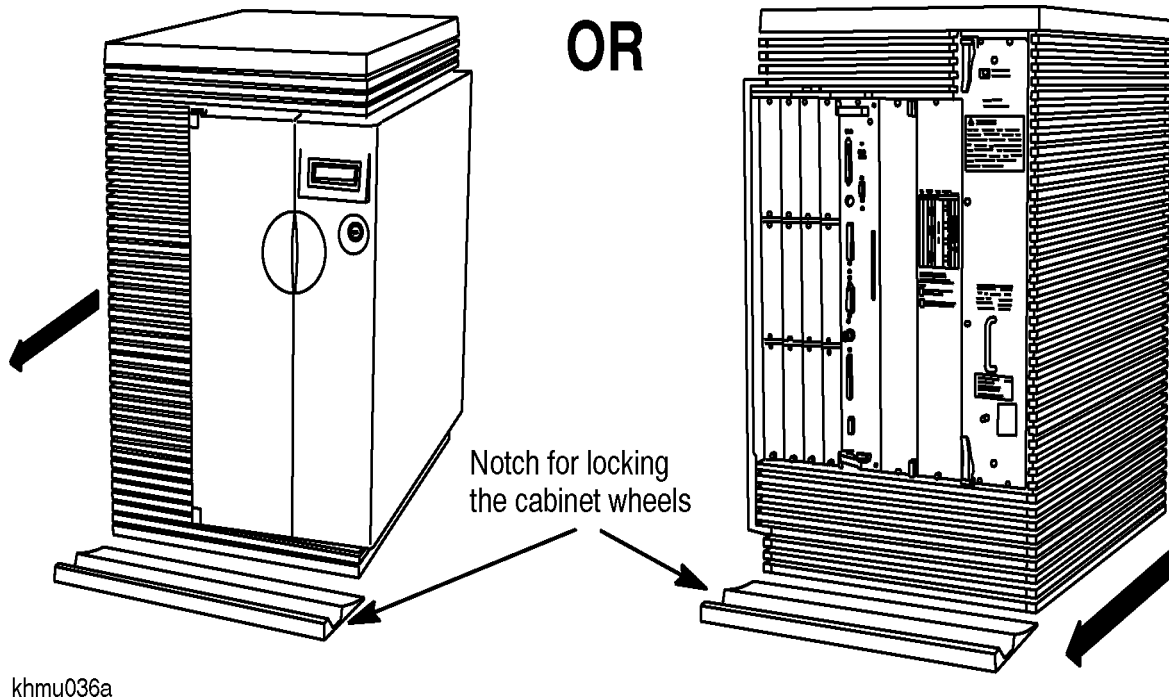


The stabilizer block (or chock block) is used to prevent the system cabinet from being inadvertently moved around. The block can be placed under either the front or rear wheels.

1. Position the stabilizer block at the desired location for the system cabinet.
2. Roll the system cabinet onto the stabilizer block until the front (or rear) wheels fall into the notch in the stabilizer block.

# Power Connections


Models 939KS/959KS/969KSx00/969KSx20

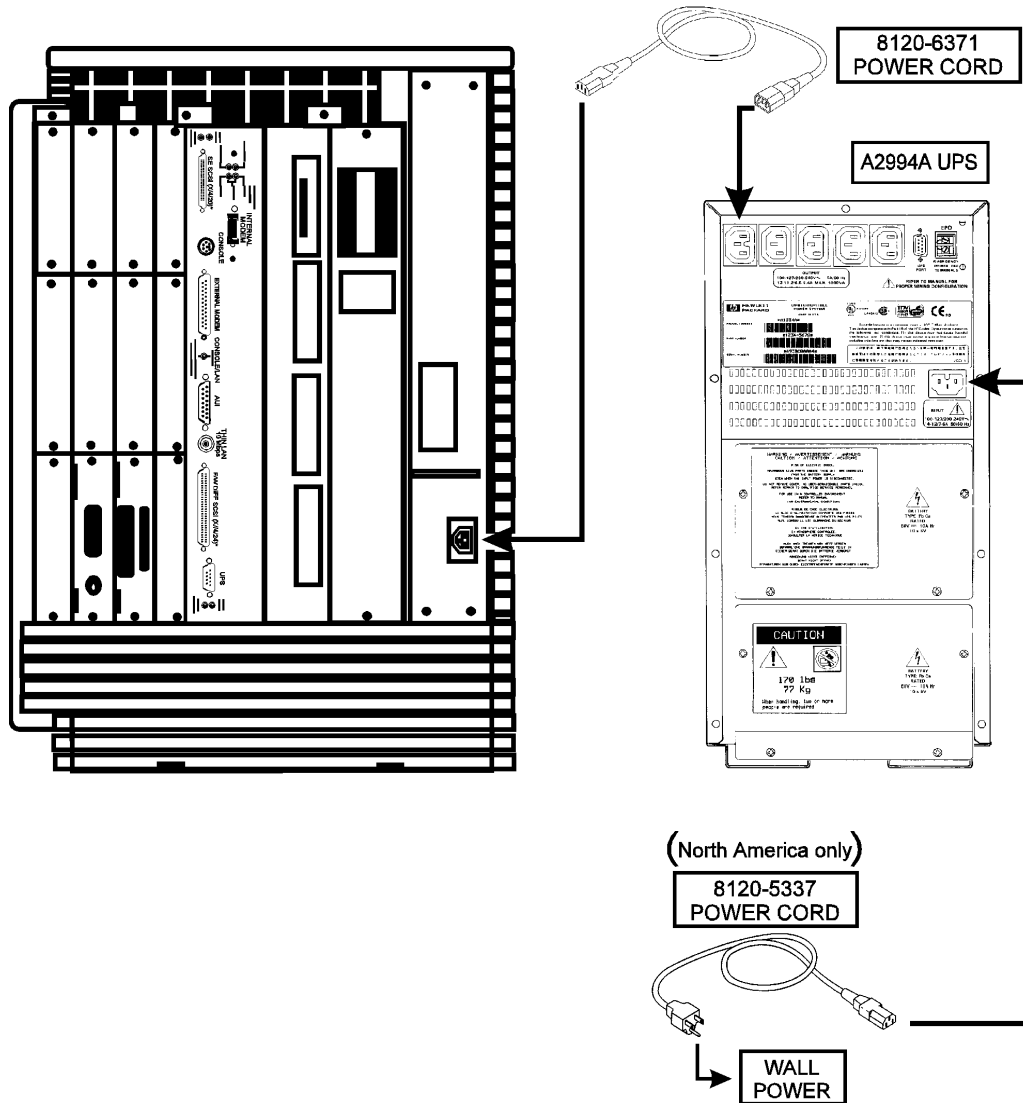

kh3iC06a

- A. Plug the system power cable into the power receptacle closest to the upper-left corner at the rear of the Uninterruptible Power System (UPS).
- B. Plug the UPS power cable into wall power.


## Model 979KS

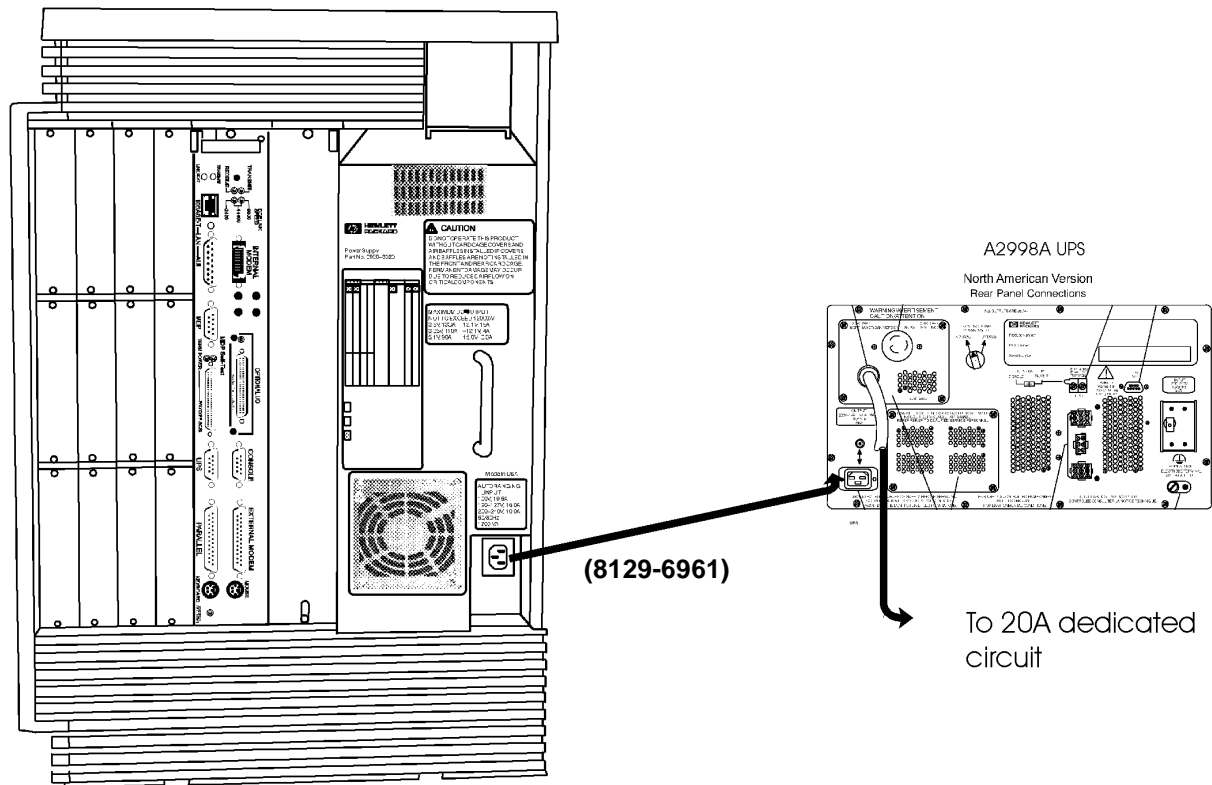

3kpw01

- A. Plug the system power cable into the 20A power receptacle at the rear of the Uninterruptible Power Supply (UPS).
- B. Plug in the UPS power cable to a dedicated 20A circuit.



## POWER-ON: First, Turn On the UPS and All Peripherals

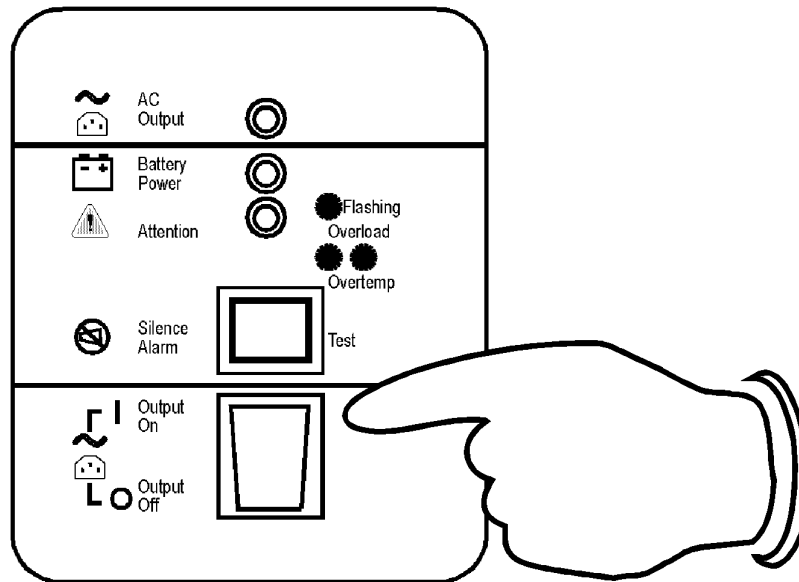

khinC01

- A. Turn on the UPS.
- B. Turn on all peripherals. Be sure all peripherals are on with no error indications.

## Then, Turn On the System

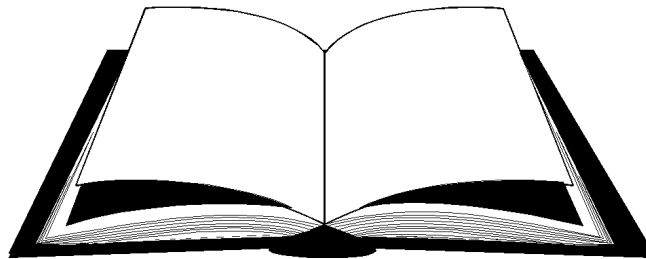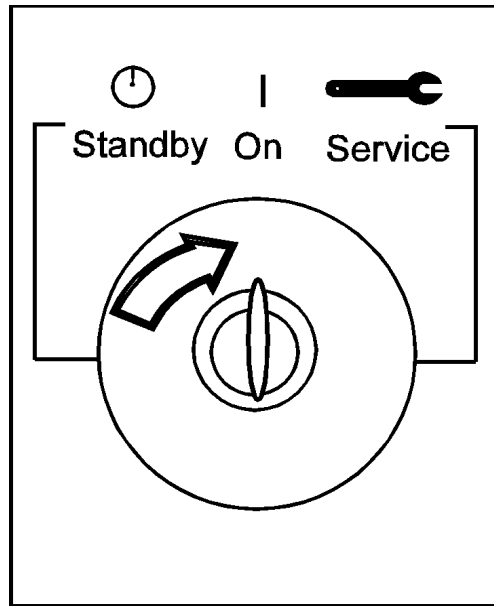

Operator's  
Handbook

kh3iC08

- C. Turn on the system by setting the key switch to the "ON" position.
- D. Refer to the **Operator's Handbook** that came with your system for operator information.